




# Single & mixed attachments


## Single attachment

Attachment by hooks only : the hooks attach to the TSR® container by the bars on the housing. The spring mounted on oscillating holder keeps the bottles in place during handling.

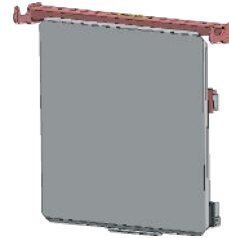

## Mixed attachment

Attachment by hooks or forks : quick and easy transformation. The forks can be retracted behind the holder.

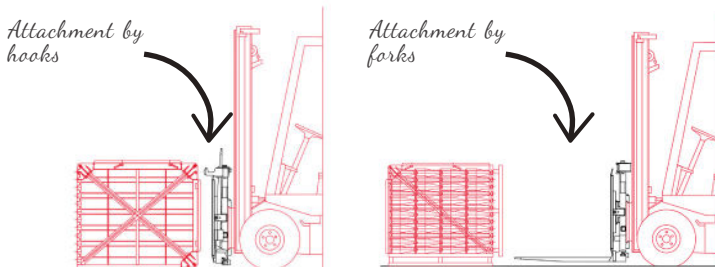

Forks up : single attachment by hooks for use with containers.

Forks down : traditional handling by forks for use with crates.




Transformation from hooks to forks.

## Installation

The attachment is fitted to the equipment holder manually, without the use of tools, on the ground and without the use of additional handling equipment. This is a 2-person operation, if necessary a pallet truck with a pallet can be used.

- 1** Retract the stop bolt.
- 2** Slide the unit laterally onto the equipment holder.
- 3** Center the attachment on the equipment holder.
- 4** Release the stop bolt.

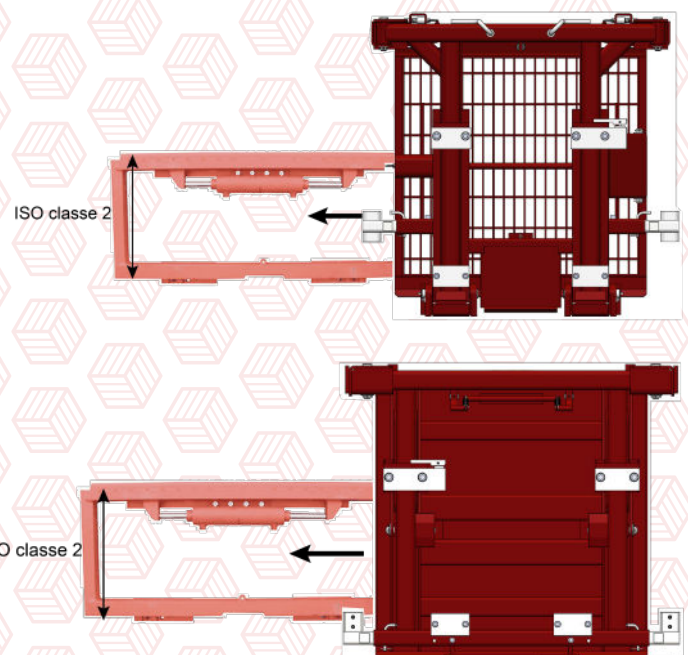

For further details, please refer to the information provided with the product.